

Installation & Wiring Instructions

Halo Surface Square - Standalone Emergency LED for Surface Mounting



PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING INSTALLATION & LEAVE WITH END USER

Description:

The Halo Surface Square is a square, standalone 3-hour non-maintained emergency luminaire suitable for surface mounting. The LED is driven at 700mA from a 3.2V 3.8Ah lithium iron phosphate (LiFePO₄) battery that provides a high output LED in emergency conditions.

The product is supplied with one of a choice of LED emitters which offer varying arcs of illuminance. Please refer to our website to download the ldt files.


The control gear used in the DALI self-test version follows the DALI-2 protocol.

This unit will recharge the batteries after the test clause of 22.3 of BS EN 61347-2-7:2012

The product features battery temperature protection in accordance with IEC 61347-2-7: 2012+A12:2022.

Specification:

Input Voltage	230-240 Volts AC 50/60 Hz
Basic Power (charging)	1.6W 17mA $\lambda = 0.40$
Basic Power (charged)	0.2W 11mA $\lambda = 0.07$
DALI Power (charging)	1.7W 14mA $\lambda = 0.50$
DALI Power (charged)	0.3W 8mA $\lambda = 0.15$
Duration	3-hours
Battery Tc Parameters	0°C to 55°C
Mains Input Terminal	0.5mm - 2.5mm (0.75mm Stranded)
Recharge Period	24-hours
Battery Discharge Current	900mA Nominal
Discharge Limit (DDP)	2.4V
Ingress Protection	IP20
Battery Pack	3.2V 3.8Ah (LiFePO ₄)
Battery Type	IFpR27/67
Charge Current	225mA Nominal
Width and Depth	155mm x 155mm
Depth	58mm
Cable Entry	20mm Centre Rear
Overall Weight (standard)	0.4Kg
Overall Weight (DALI)	0.42Kg
Beam Angle (open area)	135°
Beam Angle (corridor)	115° x 155°
LED CCT	5700K

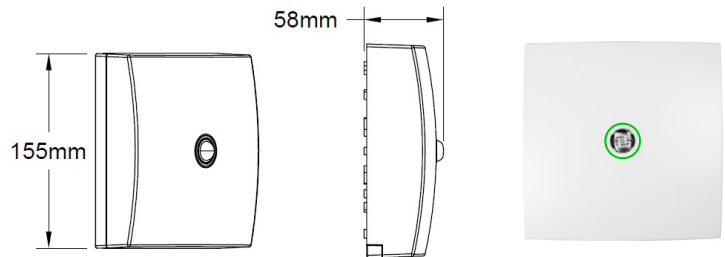

Ordering codes:

Standard Operation:

CSW/1/NM/**	RAL 9016
CSB/1/NM/**	RAL 9005

DALI-2 Self-test:

CSW/1/DA/**	RAL 9016
CSB/1/DA/**	RAL 9005

LiteMesh Wireless Self-test:

CSW/1/LMEM/**	RAL 9016
CSB/1/LMEM/**	RAL 9005

** - OA for Open Area (268lm) or CO for Corridor (266lm)

Important

It is recommended that this product is installed by a competent person ensuring the installation complies with the necessary standards. Liteplan accept no responsibility for injury, damage or loss, which may arise as a result of incorrect installation, operation or maintenance.

The product requires an un-switched supply for charging the battery.

ISOLATE MAINS SUPPLIES AND DISCONNECT THE BATTERY BEFORE INSTALLATION OR MAINTENANCE.

Installation:

1. Remove the cover off and mount the luminaire to either the ceiling or wall, using fixing points or Besa box fixing. For wall mounting ensure the battery is at the bottom of the luminaire.
2. Connect the mains supply as per wiring diagram shown on Pg. 2
3. If DALI terminal is present, connect DALI bus to the DA DA terminals.
4. Connect the battery.
5. Refit the cover into the retaining clips, ensuring no cables are trapped. Push into the points shown in diagram three on page 2 and slide into its locked state.
6. When mounting the corridor version please ensure that the lens is aligned along the corridor correctly. The longer part of the lens should follow the orientation of the corridor.




Installation & Wiring Instructions


Halo Surface Square - Standalone Emergency LED for Surface Mounting

PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING INSTALLATION & LEAVE WITH END USER


1

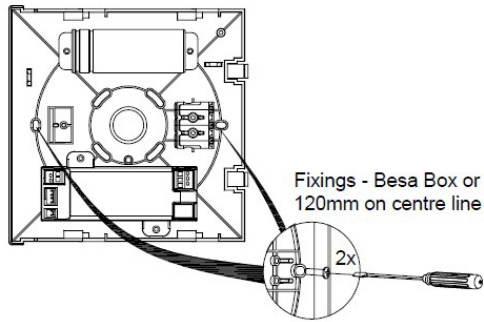

2

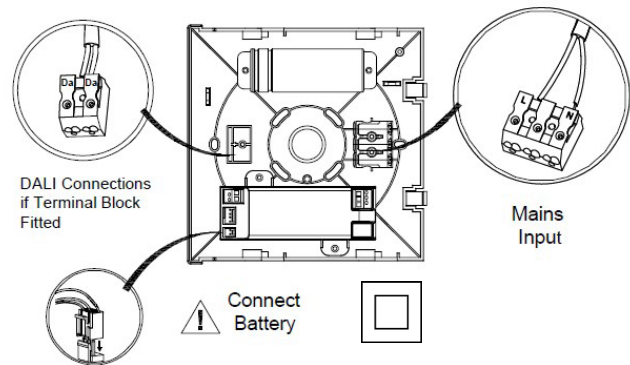


3

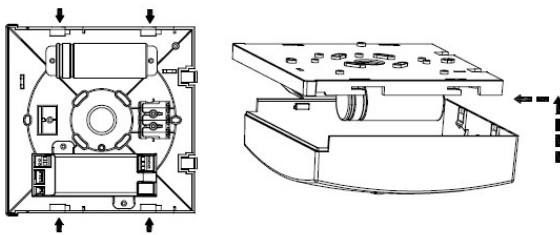


4

Ensure correct orientation of lens

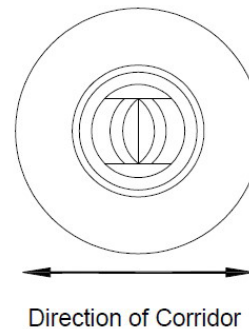

For a test record card, please visit this QR code link:

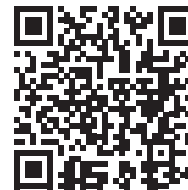

Testing/Commissioning:

- Ensure the power is connected.
- Connect the battery.
- Switch on the Un-switched Supply - Check the Charge LED illuminates.
- Switch off the Un-switched Supply - Check the Charge LED extinguishes and the load LED illuminates.
- Enter the commissioning date on the Battery Pack.
- Switch on the Un-switched Supply