
Installation & Wiring Instructions
CE2S/SM/M and CE2S/SM/DA

PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING INSTALLATION & LEAVE WITH END USER

Description:

The CE2S/SM is a compact, architectural suspended exit sign. The CE2S/SM is designed to be ceiling mounted as shown overleaf.
The battery is a 3.2V 3.8Ah lithium iron phosphate (LiFePO4). The LEDs are driven at 700mA and provide suitable legend Illumination for 3 hours.
The control gear that powers the CE2S/SM/DA operates with the DALI-2 protocol.
The CE2S/SM is supplied with a kit of ISO7010 legend vinyls, so you can choose from arrow up, arrow down, arrow left, or arrow right at the point of installation.
The unit will recharge the batteries after the test of clause 22.3 of BS EN 61347-2-7:2012.
The product features battery temperature protection in accordance with IEC 61347-2-7: 2012+A12:2022.

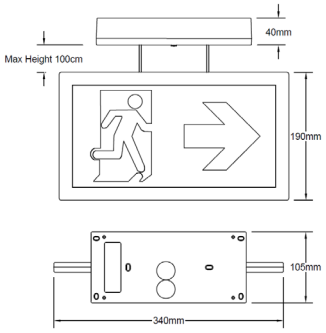

Part Codes


CE2S/SM/M/**	Maintained/Non-maintained basic emergency
CE2S/SM/DA/**	Maintained/Non-maintained DALI-2 self-test
CE2S/SM/LMEM/**	Maintained/Non-maintained Wireless self-test

** Denotes arrow direction required. AU for arrow up, AD for arrow down and ALAR for arrow left/arrow right

Specification:

Input Voltage	230-240 Volts AC 50/60 Hz
Power Standard Charging *	5.7W 34mA λ = 0.71
Power Standard Charged *	0.2W 11mA λ = 0.07
Power DALI Charging *	5.4W 30mA λ = 0.75
Power DALI Charged *	0.3W 8mA λ = 0.15
Duration	3-hours
Minimum Battery Tc	0°C
Maximum Battery Tc	55°C
Ta	0°C to 25°C
Battery Fuse	Internal
Discharge Current	900mA nominal
Discharge Voltage Cut-off	2.5V
Ingress Protection	IP40
Battery Pack	3.2V 3.8Ah LiFePO4
Charge Current	225mA nominal
Recharge Period	24 Hours
Overall Weight	1.2Kg
Maximum Cable Drop	1,000mm

* LiFePO4 control gear will initially charge the battery and then spend 90% of its operational life in a 'Charged' or standby state.

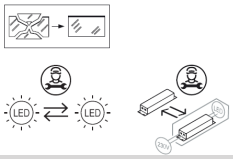

The light source and control gear in this luminaire shall only be replaced by the original manufacturer, service agent or a similarly qualified person.

Important

It is recommended that the unit is installed by a competent person ensuring the installation complies with the necessary standards. Liteplan accept no responsibility for injury, damage or loss, which may arise as a result of incorrect installation, operation or maintenance.

The product requires an un-switched supply for charging the battery..

ISOLATE MAINS SUPPLY AND DISCONNECT THE BATTERY BEFORE INSTALLATION OR MAINTENANCE.

Installation:

1. Cut power to the location, via the breaker.
2. Remove the first fix from the ceiling box.
3. Install the first fix section to the ceiling, as required and bring the mains cable through. See overleaf.
4. Install the mains cables either as maintained, or non-maintained and, where required, the DALI bus cables as shown overleaf.
5. Connect the strain relief cable between the first fix and the main ceiling box.
6. Connect the Output to LED lead to the main body of the ceiling box.
7. Once permanent power is assured, connect the battery connectors .
8. Adjust the suspension cables to your desired length,at a maximum of 1,000mm (in keeping with regulations). If cutting down legnth, the insulated cable must be tinned.
9. Click the body to the first fix, adding security screws, where required.
10. Fit the legend vinyl, ensuring the correct arrow direction is chosen. This should follow the guidance of BS (EN) 5266.
11. Reinstate power to the location at the breaker.
12. See Testing and Commissioning section.

The battery within this luminaire is servicable and should be replced with the Liteplan part number 1/LP38/S/TE. This change should be carried out by a qualified professional.

Tel +44 (0)1708 372223 | www.liteplan.com | customerservice@liteplan.com | RM3 0AP. UK

Liteplan reserve the right to change colour, price or specification without prior notice


ISS 021126

Installation & Wiring Instructions
CE2S/SM/M and CE2S/SM/DA

Liteplan emergency lighting


PLEASE READ THESE INSTRUCTIONS BEFORE COMMENCING INSTALLATION & LEAVE WITH END USER

Figure one

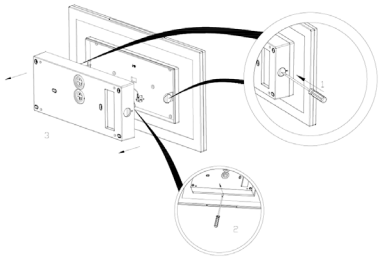


1- Take the fitting apart as shown in the diagrams above, removing the back box from the main body of the exit sign.

Figure two

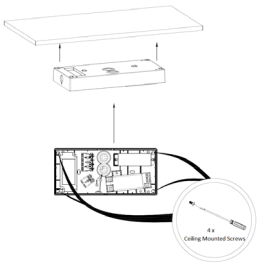


2 - Install the first fix section of the CE2S to the ceiling, using either fixing points A or B.

Figure three

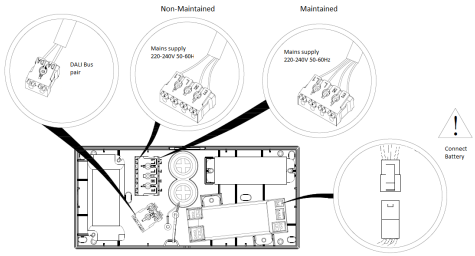


3 - Fit mains supply cables to the terminals as shown. Either maintained or non-maintianed as indicated and fit DALI cables if required. (DALI versions only).

Figure four

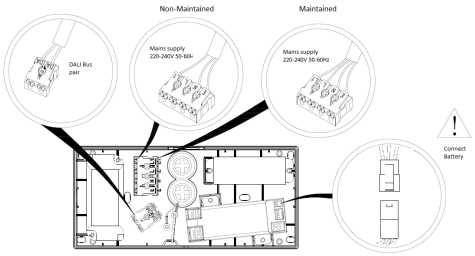


4 - Once mains supply is present, connect the battery cable connectors together and connect the LED leads from the panel to the module, as shown.

Figure five

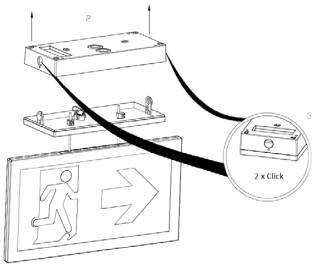

5 - Click the main body of the CE2S/SM to the back box listening out for two clicks. Where required, add two security screws at the dimples.

Figure six

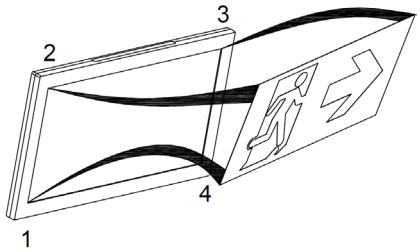

6 - Fit the legend vinyl to the body of the CE2S/SM. Start at corner 1, then corner 2, then 3, then 4, observing the requirements of BS (EN) 5266.

Testing/Commissioning:

- Ensure all connections are made, including the batterythe load is connected.
- Switch on the Un-switched Supply (L1) - Check the charge LED illuminates.
- Switch on the switched supply (L) - Check the central load illuminaites (maintained units only)
- Switch off the Un-switched Supply (L1) - Check the charge LED extinguishes and the central load LED illuminates.
- Switch on the Un-switched Supply (L1).

Tel +44 (0)1708 372223 | www.liteplan.com | customerservice@liteplan.com | RM3 0AP. UK

Liteplan reserve the right to change colour, price or specification without prior notice

ISS 021126

Litemesh LiFePO4 DALI 2 UK CA